

Обратные шаровые клапаны



Архангельск (8182)63-90-72
Астана (7172)727-132
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Казань (843)206-01-48

Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81

Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54

Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

Киргизия (996)312-96-26-47

Казахстан (772)734-952-31

Таджикистан (992)427-82-92-69

ERHARD BALL CHECK VALVE

The check valve according to the ball check principle

In the case of the ERHARD ball check valve, the closing ball being in open position is pressed out from the flow cross-sectional area by the medium. This opens the valve. Ball check valves are therefore especially suitable for wastewaters posing a high risk of clogging. When in open position, the ERHARD ball check valve has a low flow resistance. It does not have any mechanically moved parts making it extremely maintenance friendly. The ERHARD ball check valve is also insensitive to dirt and therefore suitable especially for use in wastewater (sewage plant).

The body is made from lamellar graphite cast iron EN-JS 1030, the cover from spheroidal graphite cast iron EN-JS 1030. The sealing ball consists of an NBR rubberised steel ball. The internal and external EKB fusion bonded epoxy coating guarantees a permanent corrosion protection.



Operating instruction

BA64E000_KRV_65-200


Dimensions

Nominal size DN	face-to-face- dim. L mm	Height H mm	Flange-ø D mm	d mm	Weight approx. kg
50	200	113	165	102	8
65	240	126	185	122	12
80	260	162	200	138	17
100	300	194	220	158	23
125	350	215	250	188	37
150	400	260	285	212	53
200	500	320	340	268	99
250	600	365	395	320	136
300	700	428	445	370	220
350	800	537	565	480	400
400	900	650	670	582	–

for flow velocities up to 3 m/s

Standard with no swimming ball for installation in a vertical pipe, flow from bottom to top and mounted in a horizontal pipe. For installation in a vertical pipe to flow from the top to the bottom or installed in a horizontal pipe with the ball-bearing down (case of space problems) a swimming ball is available.

FLOW RATE

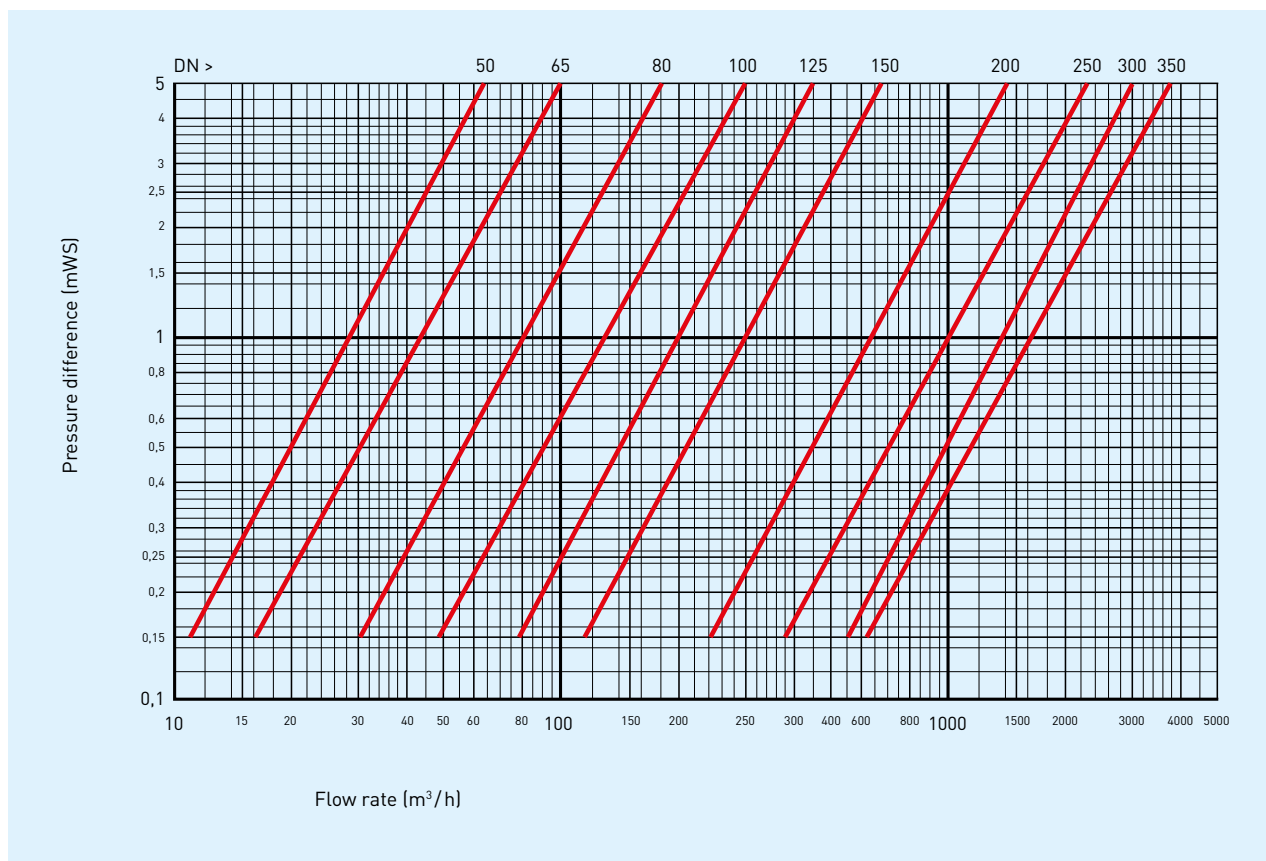

Fully opening at approx. 2 m/s flow rate

Required back pressure:

- for vertical mounting 0,1 bar
- for horizontal mounting 0,3 bar

Headloss when installed with vertical upward flow

Nominal size DN	Headloss bar
50	0,010
65	0,014
80	0,016
100	0,021
125	0,026
150	0,030
200	0,039
250	0,048
300	0,052
350	0,062
400	0,073



По вопросам продажи и поддержки обращайтесь:

Архангельск (8182)63-90-72
Астана (7172)727-132
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Казань (843)206-01-48

Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81

Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54

Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

Киргизия (996)312-96-26-47

Казахстан (772)734-952-31

Таджикистан (992)427-82-92-69

Единый адрес для всех регионов: edf@nt-rt.ru || www.erhard.nt-rt.ru