

Комплект воздушных клапанов AIR-BEG



Архангельск (8182)63-90-72
Астана (7172)727-132
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Казань (843)206-01-48

Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81

Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54

Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

Киргизия (996)312-96-26-47

Казахстан (772)734-952-31

Таджикистан (992)427-82-92-69

ERHARD AIR-BEG

air valve set

AIR-BEG, air valve set for the direct earth installation

Expensive and high-maintenance shafts for installation can be dispensed with when using the ERHARD AIR-BEG air valve set as the kit of fittings for underground installation is intended for direct installation. The air valve set can be installed above the surface where the valve protrudes 180 mm from the ground or underfloor where special surface boxes are available. Cover and sleeve pipe are made from top-quality Cr-Ni steel ensuring a long service life. Further product features:

- Spindle with four cornered shaft, operation with handwheel also possible
- Air inlet opening or air outlet opening with insect mesh to avoid any contamination
- Four bolts as guideway during inspection
- Filter mat as thermal insulation and as protection from falling dirt
- Flanged connection DN 80, PN16/25
- Housing parts from the air valve inside enameled

Area of use

- Automatic venting of water pipes
- Suitable for earth installation

Working area

- Lowest operating pressure: 0,2 bar
- Largest operating pressure: to 16 bar / to 25 bar
- Max. working temperature up to 60° C


When ordering the specifying "underground" or "post fire" is required. Please give us your desired pipe cover. Other pipe cover on request. Optional version with air lock available.

Pipe cover RD (m)	Underground H (mm)	Post fire H (mm)
0,75		806
1,00	806	1056
1,25	1056	1306
1,50	1306	1556
1,75	1556	





Operating instruction

BA69E011_Be-uEntlüftungsgarnitur_AIR-BEG_DN80

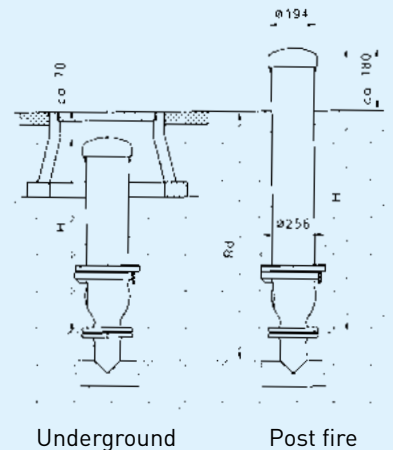

Air capacity diagram

Air valve capacity:

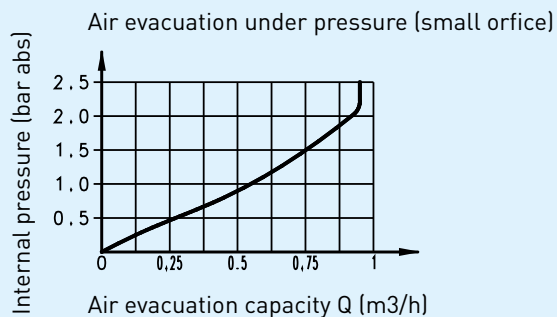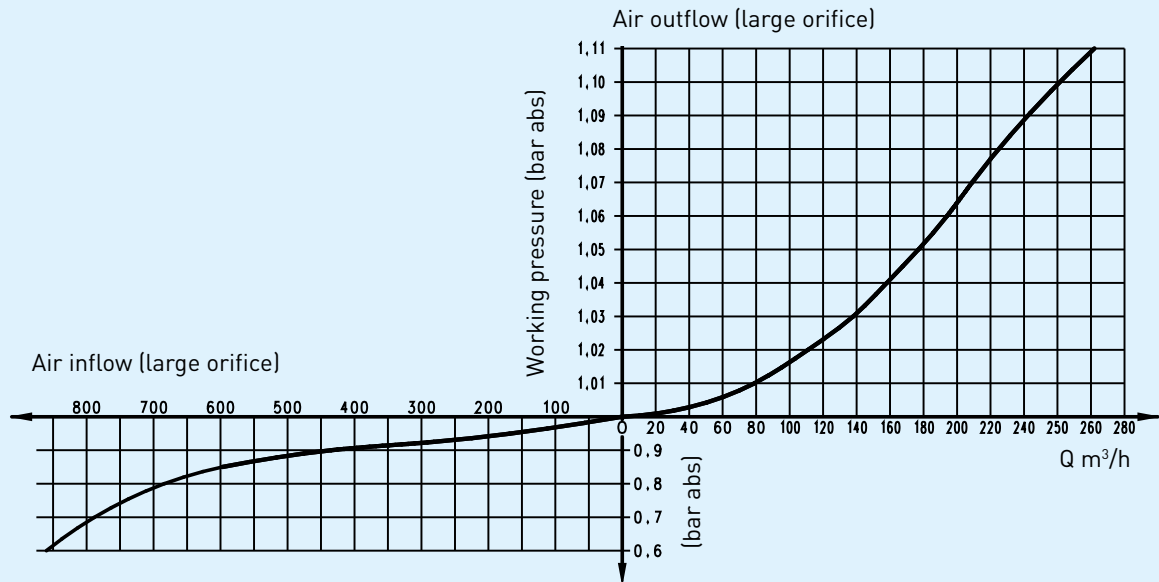

Recommended Limit Values

Filling the Pipeline

The maximum permitted pressure surge when closing of the AIR BEG air max. = 80 m/s valve should be limited to $P=3$ bar for safety reasons. This value results from a filling speed of 0.25 m/s in the pipeline.

Recommended Limit Values

Bleeding the Pipeline

The recommended maximum bleeding speed is $V_{\text{max.}} = 80$ m/s (related to the free ventilation cross section). This represents an air inflow rate of approx. $345 \text{ m}^3/\text{h}$.



По вопросам продажи и поддержки обращайтесь:

Архангельск (8182)63-90-72
Астана (7172)727-132
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Казань (843)206-01-48

Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81

Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54

Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

Киргизия (996)312-96-26-47

Казахстан (772)734-952-31

Таджикистан (992)427-82-92-69

Единый адрес для всех регионов: edf@nt-rt.ru || www.erhard.nt-rt.ru